



OUTPUT TOGGLES ON/OFF WITH EACH PUSHBUTTON ACTIVATION
 USE CD4013B FROM TEXAS INSTRUMENTS FOR BEST RESULTS

One press of the button will cause the LED light to slowly ramp up to full intensity.
 A second press will cause the lamp to ramp down to fully off mode.

DESIGNED BY DAVE JOHNSON
 DISCOVERCIRCUITS.COM
 ALL RIGHTS RESERVED
 DRAWN BY: DAVE JOHNSON

Title		
UP/DOWN RAMPING LED DRIVER		
Size	Document Number	Rev
B	UPDOWNRAMPINGLED1.DSN	A
Date:	Monday, March 09, 2009	Sheet 1 of 1