



$$F_{OUT} = \left[\frac{V_{IN}}{2.09} \right] \left[\frac{R_S}{R_L} \right] \left[\frac{1}{RC1} \right]$$

AIR TRANSPARENCY MONITOR

POWER SUPPLIES AND V/F CONVERTER